 
 



Advantage, PartyShade, Majestic, and Monarch Setup

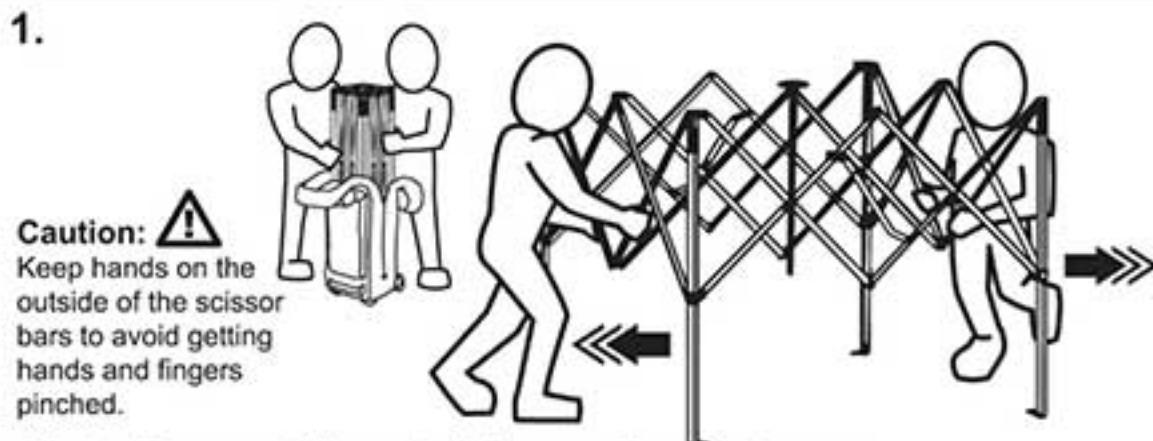

After taking everything out of the carry bag, center one person on each side, in line with center scissors beam. Grasp the lower "V" at the center. Both will lift and pull out, stepping away from each other.

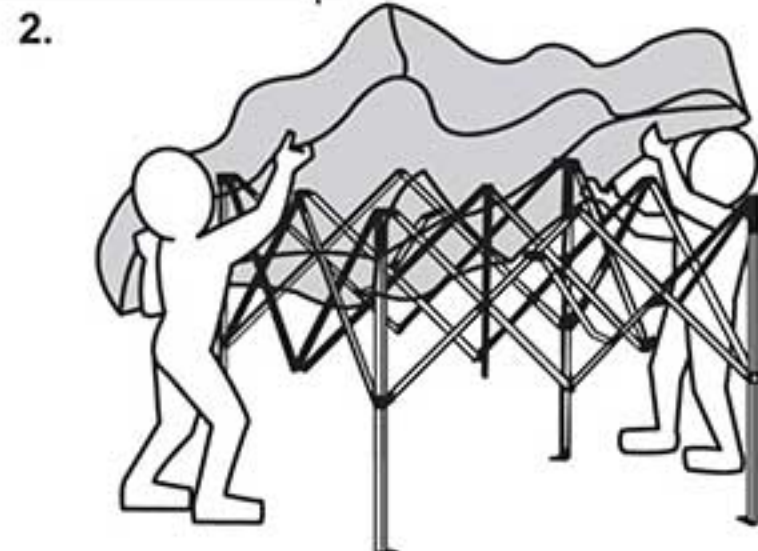

 Pull frame out half way. Place fabric top on framework.

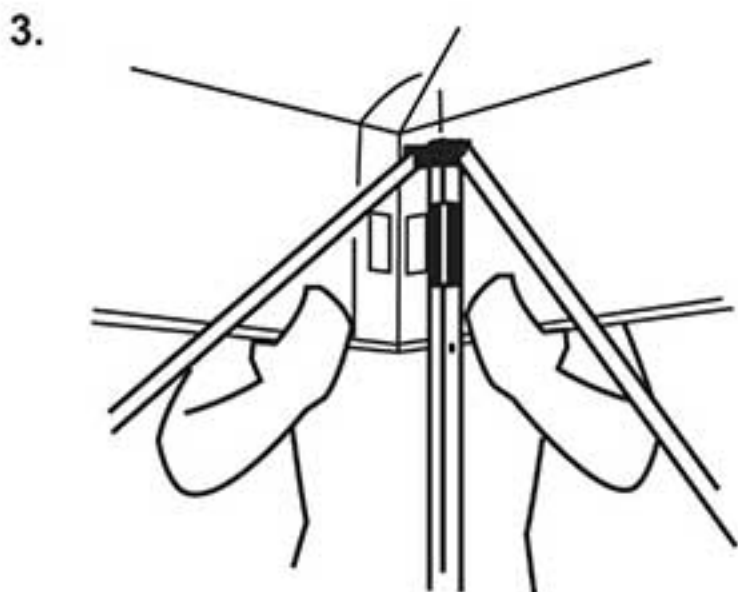


Attach to each hook and loop corner.



Pull frame completely out. Push the leg socket over the button, so that it is resting on top of the button. Do this to each leg in the up, or extended position.



 Lift each leg and slide lower leg extension out until the latching button snaps into the first adjustment hole. The KD Kanopy will be set at the lowest upright position.

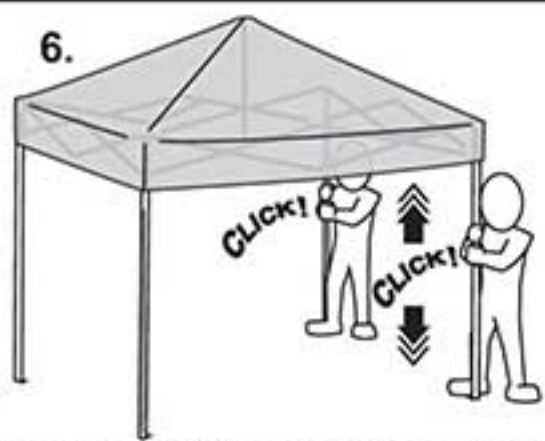


For height or leveling adjustment, depress leg latching buttons and slide the lower leg extensions as required to latch at any of the four adjustment holes. Last, put the four ground spikes through each hole in the bottom legs to secure to ground.

Caution: ⚠️
Please remember this a portable shelter so make sure whether you are setting up on concrete or on grass that you weight the canopy down.

Take - Down

 Depress push button on lower leg and collapse all the legs, reach under fabric at corners and push in button and pull down fitting, repeat at all four corners. Hold lower scissor bars on one side, one person on opposite side does the same, lift canopy and walk towards each other until canopy is 2/3 collapsed. Pull fabric corners off the corners and lift top off the frame, collapse the rest of the canopy to fit in bag.

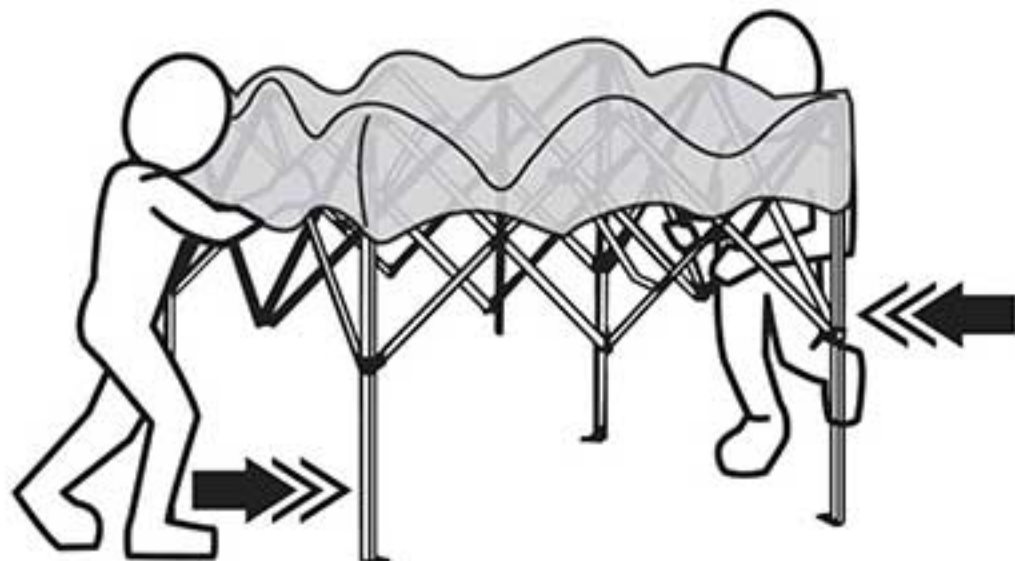

Top Folding Instructions

1. Fold all four corners together and lay flat. This is the most important step in correctly folding color combination tops. Keeping the coated sides of the same color together to prevent color transfer.



2. Take the four corners and fold them to the opposite side.



3. Fold the tip of the top to the bottom edge.



4. Fold in half lengthwise bringing the top to the bottom edge.



5. Fold into thirds and place in top bag.



Using The KD Wheel Bag

Stand the canopy frame upright and open wheel bag to full length, by unzipping one side to another. Once the bag is completely unzipped place frame in bag and zip the sides around the frame. Place top in front pocket or wheel bag.

Wheel bag is shown below. Please follow these same instructions for non-wheel bags

