

1.



After taking everything out of the carry bag, center one person on each side, in line with center scissors beam. Grasp the lower "V" at the center. Both will lift and pull out, stepping away from each other.

2.



Pull frame out half way. Place fabric top on framework.

3.




Attach to each velcro corner.

4.



Pull frame completely out. Push the leg socket over the button, so that it is resting on top of the button. Do this to each leg in the up, or extended position.


5.

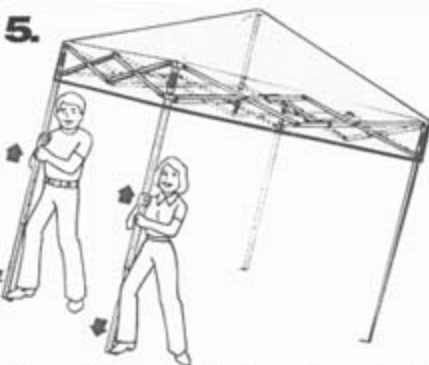

Lift each leg and slide lower leg extension out until the latching button snaps into the first adjustment hole. The KD Kanopy will be set at the lowest upright position.




6.

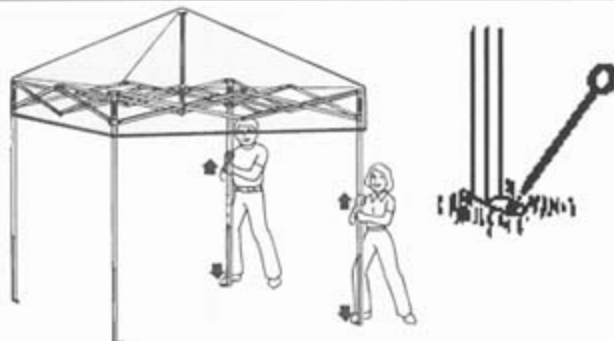

For height or leveling adjustment, depress leg latching buttons and slide the lower leg extensions, as required, to latch at any of the four adjustment holes. Last, put the four ground spikes through each hole in the bottom of the legs

TAKE - DOWN

Fully retract all lower leg extensions. Depress latching buttons at sliding leg sockets and move sockets below the latching button. Push frame together half way. Two persons centered on opposite side, inline with center scissors beam, will grasp the upper inverted "V" at the center. Both will lift and push in, walking toward each other.

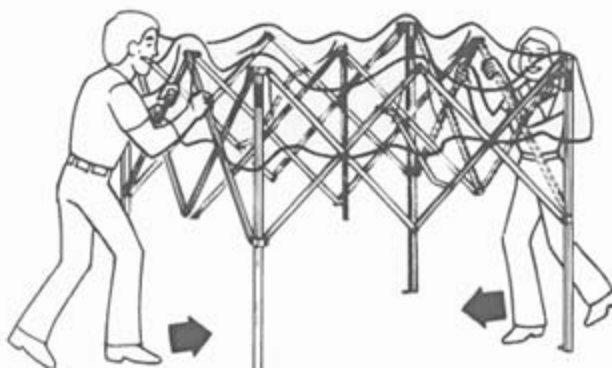

TOP FOLDING INSTRUCTIONS

CAUTION:

Please use care when folding combination light and dark colored tops. Fabric Dyes have a tendency to migrate from dark shades to lighter shades if the coated sides are in contact when folded and stored.


1. Fold all four corners together and lay flat. This is the most important step in correctly folding Color Combination tops. Keeping the coated sides of the same color together to prevent color transfer.

2. Take the four corners and fold them to the opposite side.

3. Fold the tip + of the top down to the bottom edge.


4. Fold in half lengthwise bringing the top to the bottom edge.

5. Fold into thirds and place in top bag.

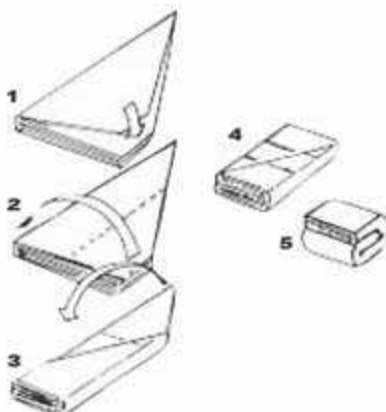

USING THE KD CARRY BAG

1.

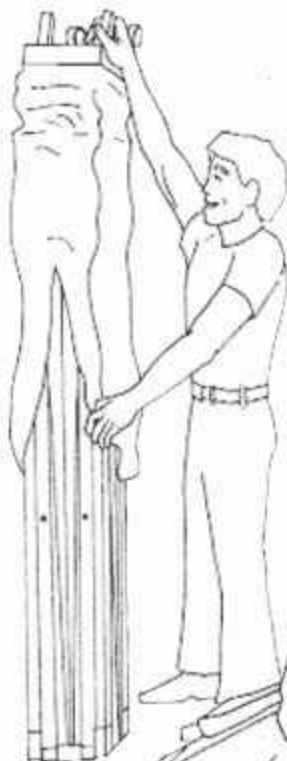

Stand the canopy frame upright and open carry bag to full length, by unfastening the hook & loop closures. 1) Slip the bag over the top end of the canopy frame. Pull the carry bag until it completely covers the canopy frame. Place the canopy top in the attached bag. 2) Use proper lifting technique to turn the canopy frame rightside up. 3) Fasten the hook & loop closures and wheel your KD unit away with ease!

Wheel bag is shown below. Please follow these same instructions for non-wheel bags.

2.



3.

