




E-Z UP® Instant Shelters®

ENCORE™ II AWNING AND NAME BANNER INSTRUCTIONS


Encore™ II

How to Set Up Your E-Z UP® Awning Accessory


Step 1.
Completely set up the E-Z UP® Instant Shelter® according to the instructions in the owner's manual provided with the product.

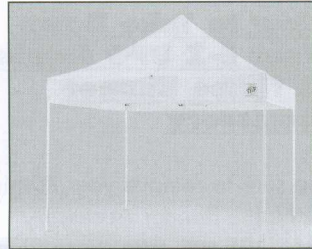


Step 2.
Locate the holes in the outer legs just below the plastic slider. Note: There are two awning brackets with steel rods attached and a knob to the outside of each bracket.

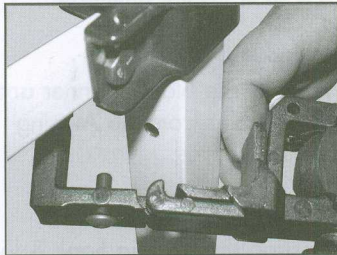


Step 3.
Locate the left awning bracket. (When facing the shelter, the left awning bracket will have the knob on the outer left)

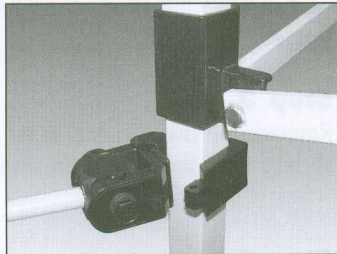

Step 4.
Insert the plastic post on the left awning bracket into the previously located hole of the leg. Swing the bracket around the leg and secure it by dropping the metal pin into the hole of the awning bracket and screw it in clockwise.

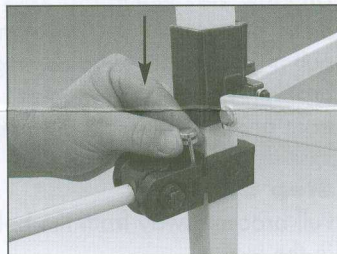


Step 5.
Locate the right awning bracket. (When facing the shelter, the right awning bracket will have the knob on the outer right)

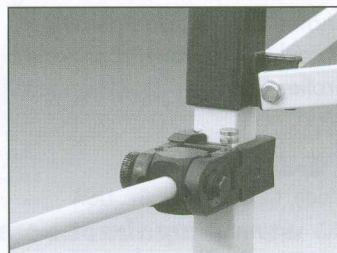

Step 6.
Repeat Step 4 except attach the right awning bracket to the leg on the right.

Step 7.
The extension arms for the awning should now be extending parallel to the ground. Turn both knobs clockwise until tightened.

Step 8.
Locate the awning fabric. Slide one pole into the sewn pocket on one end of the awning. Then repeat on the other end (slightly bending the arm inward to slide through).

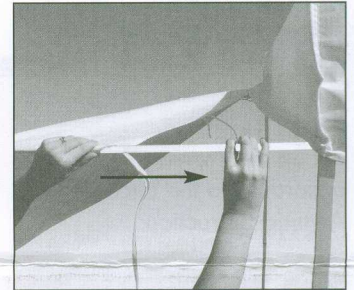


Step 9.
Secure the awning by wrapping the hook & loop straps around the frame trusses and press together firmly.



How to Convert your E-Z UP® Awning into a Sun Catcher™

Step 1.
After completing set up instruction steps 1 – 9 loosen the awning arms by rotating the knob counter clockwise on both awning brackets.

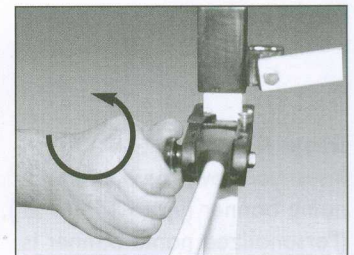

Step 2.
Fold the awning down 90 degrees until perpendicular to the ground. Turn both knobs clockwise until tightened. Your Sun Catcher™ is now positioned to block the setting sun.

